

# **UE-THC000060**

Product Introduction



#### 1 产品概述

#### **Product Description**

温度控制器 THC000060

该温度调节器特别适用于控制风扇、加热装置和热交换器,也可以作为信号发生器用于监控控制机柜内部 温度。

The temperature regulator is especially suitable for controlling fans, heating devices and heat exchangers, and can also be used as a signal generator to monitor the internal temperature of the control cabinet.

#### 1.1 产品参数 Product Parameters

产品尺寸 Product Size	60mm*33mm*43mm
温控范围 Temperature Range	0°C ~ 60°C
温度误差 Temperature error	±4K
回差值 Regression value	7K (例:控制器设定值为 25°C,环境温度上升超过设定值后,触点变化,环境温度下降至 18±4°C,触点恢复)
最大切换容量 Maximum Switching Capacity	250V / AC,10A / 120V AC,15A / DC 30W
最小负载能力 Minimum Load Capacity	250V0.2A, 120V0.2A(AC), 30W(DC)
导轨安装 DIN-Rail Mounting	35mm
工作 / 存储温度范围 Operating/Storage Temperature Range	-45°C ~ +80°C
盐雾等级 Salt Spray Grade	根据 ISO 9227 标准,中性盐雾实验要求 16h
防护等级 Protection Class	ip20

本温控器为单通道温度控制器,可选常开控制回路或常闭控制回路:

1. 常开触点(蓝): 常用于监控过滤器风扇, 热交换器或当温度超过设定数值时闭合电路输出信号;

2. 常闭触点(红): 常用于连接加热器, 当温度达到设定数值时断开线路。

The thermostat is a single channel temperature controller, which can be selected as normally open control loop or normally closed control loop:


- 1. Normally open contact(BLUE): it is commonly used to monitor filter fans, heat exchangers or close circuit output signals when the temperature exceeds the set value;
- 2. Normally closed contact(RED): it is commonly used to connect heater, and disconnect the line when the temperature reaches the set value.


#### 1.2 注意事项 Attention

- 安装,使用前请检查外观以及附件有无损伤确实,核对型号是否一致:
- 可靠接地,无松动现象,否则会引起故障和人身事故;
- 接通电源前,检查是否可靠安装,否则会引起损坏;
- 严禁冲洗,露天淋雨,以及在不符合的要求的环境中使用; 特殊定制的产品,如需作为约定工况之外的其它用途使用,使用前请先咨询本公司技术人员,确认后 ▶ 方可使用;
- 设备安装时注意检查插线口,是否有掉入的杂物,必须要将内部清理干净。
  - Before installation and use, please check the appearance and accessories for damage, and check whether the models are consistent
- Reliable grounding, no loosening phenomenon, otherwise it will cause fault and personal accident; Before connecting the power supply, check whether it is installed reliably, otherwise it will cause
  - It is strictly forbidden to wash, rain in the open air, and use in the environment that does not meet the requirements;
- For special customized products, if they need to be used for other purposes other than the agreed working conditions, please consult the technical personnel of our company before use;
  - When installing the equipment, pay attention to check whether there are falling debris in the socket, and clean the interior.


### 2 原理图


## **Schematic Diagram**

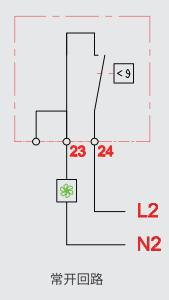


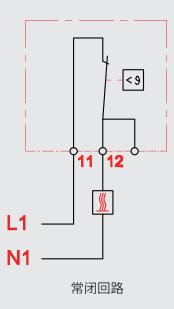


#### 2D 图纸 2D Drawing

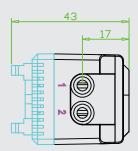

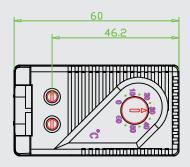

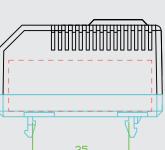

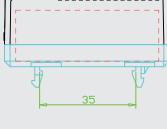

## **UE-THC000060**

## Product Introduction

Vaule Plus, Professional Choice for Each Engineer!

