

威 佳

威佳电气,
每位工程师的专业选择!

UE-iHot-P400W

Product Introduction



使用产品前请仔细阅读本使用说明，并请妥善保管

1 产品概述

Product Description

UE-iHot-P400W 新系列是一种紧凑的外壳加热器，能够提供高达 500W 的高输出功率。iHot 开发了一系列加热器模块，解决了由于箱内温度过高而产生的冷凝现象和电气元件在低温下无法工作的问题。与传统箱式加热器相比，具有结构紧凑、节能高效、温升下降快、安全可靠等优点。

UE-iHot-P400W new series is a compact enclosure heater with the capability to provide high output wattage, up to 500W. A series of heater modules are developed to solve the problems of condensation caused by the temperature in the cabinet and the failure of electrical components to work at low temperature. Compared with the traditional cabinet heater, this series has the advantages of compact structure, energy saving and high efficiency, fast temperature rise and fall, safety and reliability.

1.1 型号参数 Model Parameters

型号名称 Type Name	最大功率 Maximum Wattage	电源电压 Supply Voltage
UE-iHot	200W	220~240VAC
	300W	
	400W	
	500W	


2 技术参数

Technical Parameters


品牌 Manufacturer	iHot
产品类型 Product Type	400W, 220V~240V
型号 Model	400W 机柜加热器 400W Cabinet Heater
详细参数 Detailed Parameters	
防护等级 Ingress Protection	IP20
运行温度 Operating Temperature	-40°C ~+70°C
运行电压 Operating Voltage	230V
加热功率 Heating Power	400W at 10°C
瞬间启动电流 Instantaneous Starting Current	6.8A
运行电流 Running Current	1.8A
风机功率 Fan Power	4.1W
风机风量 Fan Air Volume	17.5CFM
转速 Speed	4100RPM±20%
噪音 Noise	30
安装方式 Installation Mode	DIN35mm 导轨卡扣安装 DIN35mm Rail Clip Installation
认证 Authentication	CE

3 原理图

Schematic Diagram

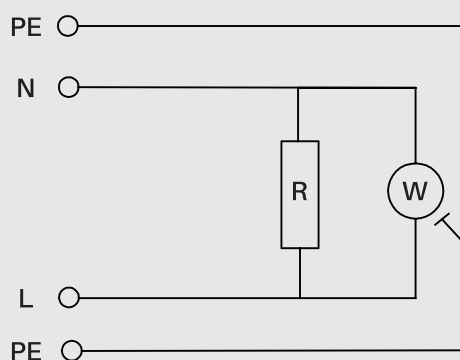

外观图 Appearance Drawing

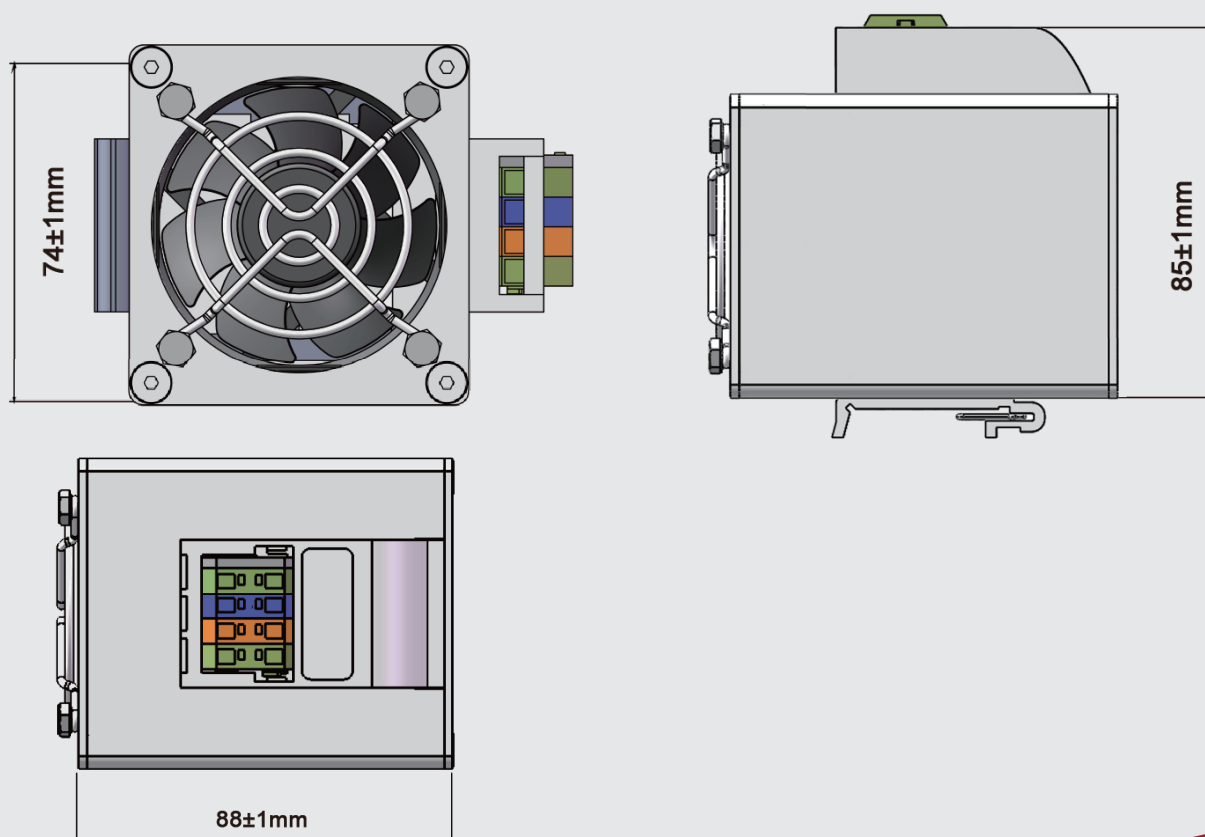

4 外部接线方式

External Wiring Mode

导线截面积：带有冷压接头 Sectional area of conductor	0.5-2.5mm ²
剥线长度 Strip Length	8-9mm/0.31-0.35 in

5 低温存储

Low Temperature Storage Test

测试项目 Test Item	测试条件 Test Condition	测试要求 Test Requirement
低温存储 Low Temperature Storage Test	-50℃低温存储 24h, 取出样品, 在室温下给样品通电 Keep the test sample in climatic chamber at -50℃ for 24 hours. After that the heater is turned on and it must work properly	样品能正常工作 It must work properly

6 低温运行

Low Temperature Operation Test

测试项目 Test Item	测试条件 Test Condition	测试要求 Test Requirement
低温运行 Low Temperature Operation Test	-40℃低温存储 2h, 取出样品, 在箱子内给样品通电 Keep the test sample in climatic chamber at -40℃ for 24 hours. After that the heater is turned on and it must work properly	样品能正常工作 It must work properly

7 高温存储

High Temperature Storage Test

测试项目 Test Item	测试条件 Test Condition	测试要求 Test Requirement
高温存储 High Temperature Storage Test	80°C高温存储 24h, 取出样品, 在室温下给样品通电 Keep the test sample in climatic chamber at 80°C for 24 hours. After that the heater is turned on and it must work properly	样品能正常工作 It must work properly

8 高温运行

High Temperature Operation Test

测试项目 Test Item	测试条件 Test Condition	测试要求 Test Requirement
高温运行 High Temperature Operation Test	80°C高温存储 2h, 取出样品, 在箱子内给样品通电 Keep the test sample in climatic chamber at -40°C for 24 hours. After that the heater is turned on and it must work properly	样品能正常工作 It must work properly

UE-iHot-P400W

Product Introduction

Vaule Plus,
Professional Choice for Each Engineer!

Wuxi Vaule Plus Electric Power Technology Co.,Ltd.
South side of shuofanlihe road and west side of sun'an highway, Xinwu District, Wuxi City
Email sale@vauleplus.com

